

**Accessories Guide** 

**ZEBRA** 

# **DS9900 Series** — Boost productivity at the point of sale with the ultimate in performance and design



**DS9908** 



**DS9908R** 

# **Cable options**

### **USB**

Series A



#### Power Plus



#### **USB Cables**

#### CBA-U21-S07ZBR

Shielded USB: Series A Connector, 7Ft. (2.1M), Straight, BC1.2



OR

#### CBA-U23-S07ZBR

Shielded USB: Power Plus Connector, 7Ft. (2.1M), Straight, 12V



The full list of supported cables for both DS9908 and DS9908R can be found at:

https://partnerportal.zebra.com/PartnerPortal/product\_services/downloads\_z/barcode\_scanners/ Universal-Cable-Guide-Bar-Code-Scanners.xlsx

#### **Main features**

- USB communication
- · Automatically detects the host
- Powered from the host, including DS9908R
- Straight or coiled cables available, as well as various cable lengths
- Range of different host types cables available
- Compatible with DS9808 USB cables (Shielded USB Cables are recommended for best ESD performance)

# **Power Supplies**

Not Applicable for USB Cables

# **Cable options**

#### **RS-232**



#### **RS-232 Cables**

#### CBA-R01-S07PBR


RS232: DB9F, 7Ft. (2M) ST, TXD-2, W/TTL Current Limit Protection [Requires external 5V power supply]



OR

#### CBA-R37-C09ZBR

 RS232: DB9F, 9Ft. (2.8M) CL, PWR Pin 9, W/TTL Current Limit Protection





RS232: 7FT (2M), NIXDORF BEETLE- 5V Direct Power, W/ TTL Current Limit Protection



The full list of supported cables for both DS9908 and DS9908R can be found at:

https://partnerportal.zebra.com/PartnerPortal/product\_services/downloads\_z/barcode\_scanners/ Universal-Cable-Guide-Bar-Code-Scanners.xlsx

#### **Main features**

- Serial communication
- · Automatically detects the host
- External power supply not required, unless specified
- Straight or coiled cables available, as well as various cable lengths
- Range of different host types cables available
- Compatible with DS9808 & DS9808R RS-232 Cables

### **Power Supplies for RS-232 cables**

 VR- UA5V4W0US	Power Supply, 5VDC, 100 - 240VAC, US/CA/MX/JP/TW
 VR- UA5V4W0BR	Power Supply, 5VDC, 100 - 240VAC, Brazil
 VR- UA5V4W0EU	Power Supply, 5VDC, 100 - 240VAC, EU/UK
VR- UA5V4W0CN	Power Supply, 5VDC, 100 - 240VAC, CN
 VR- UA5V4W0AU	Power Supply, 5VDC, 100 - 240VAC, HK/AU






PWR-WUA5V4W0US Power Supply 5.2v, 1.1A

# **Cable options**

# **IBM (RS-485)**

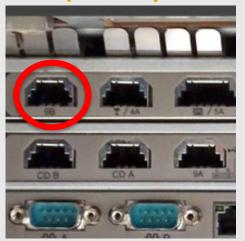

#### **IBM Cables**

#### CBA-M61-S07ZAR

Assembly, Cable, Auto-Host detect – IBM: 468X/9X, 7FT(2M) Straight, Port 9B



The full list of supported cables for both DS9908 and DS9908R can be found at:

https://partnerportal.zebra.com/PartnerPortal/product\_services/downloads\_z/barcode\_scanners/ Universal-Cable-Guide-Bar-Code-Scanners.xlsx

#### **Main features**

- IBM 4690 communication
- Automatically detects the host, but does not choose a port address
- · External power supply not required

### **Power Supplies**

Not Applicable for IBM Cables

# **Mounting Options**

## **Multi-mount Bracket**

### **BRKT-MM0099C-04**

Multi-Mount, DS9908 (Midnight Black)
[Compatible with DS9908 only, will not fit the DS9908R]





